

# Sensor Repeater User Guide

**The Sensor repeater** is a battery backed up device that extends the wireless range of compatible sensors

#### **Features**

- Extends the range of wireless sensors
- Rechargable Backup Battery
- Cover and Wall Tamper
- 3-year warranty

**Enroll** by sending an enrollment signal from the sensor with the help of an installation specialist


## Option for sending an enrollment signal


• Open the cover to trip tamper


**Install** by mounting the repeater in the desired location using the mounting screw holes. Then connect the power supply to the repeater.

**Set the Repeater protocol** by changing both the panel and sensor selection knobs to position 8 (Connect+).

**Do Not** enable configuration mode or learn sensors until repeater is enrolled (requires an installation specialist)

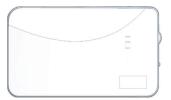

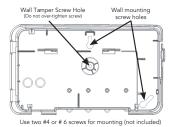

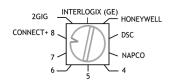


**Enable configuration mode** by pressing and releasing the "**Configure**" button. The repeater will beep and the yellow LED will illuminate to confirm configuration mode is enabled.

### Configuration Mode Tips

- Configuration Mode ends automatically when the cover is closed, the "*Configure*" button is pressed again, or 30 minutes after the last action.
- Configuration Mode is locked out 24 hours after power up. To re-enter configuration mode, the repeater must be power cycled by removing both the 12VDV input power and backup battery for at least 5 seconds.
- When re-entering Configuration Mode, previously learned sensors are retained.

**Learn Sensors** to be repeated by placing the repeater into configuration mode and tripping the desired sensors.

- When repeating life safety devices, two Repeaters MUST BE used in parallel.
- The repeater will beep after learning each new sensor.
- Sensors not learned into the repeater will not be repeated.

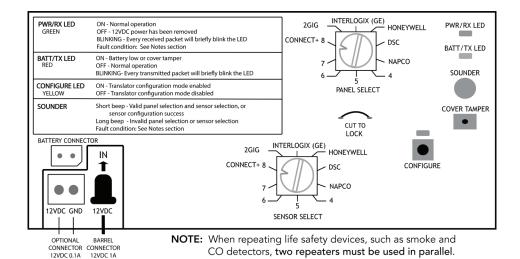

## **Specifications**

Physical	
Housing Dimension	8.5 x 1.0 x 1.3 inches (21.6 x 2.5 x 3.3cm)
Weight with Battery	016 ounces (454 grams)
Mounting Screws	#4 or #6 (Not Included)
Environmental	
Operating Temperature	32 to 120 °F (0 to 49 °C)
Maximum Humidity	85% non-condensing relative humidity
Sensor Specifications	
12VDC Output	10.2VDC to 13VDC, 150mA Max
Battery Specifications	85% non-condensing relative humidity
Transmitted Indication	Low Battery, Cover Tamper, Wall Tamper, Supervision

Specifications subject to change without notice



SENSOR REPEATER – 010 Tech Support: 1-855-76-THINK (1-855-768-4465) www.thinkprotection.com